


# ProSource

## Adjustable Closet Rod Tringle ajustable pour placard Varilla ajustable para closet

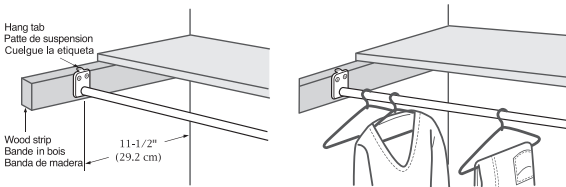

### Installation:

1. Assemble rod by sliding smaller diameter rod inside larger rod.
2. Position closet rod approximately 11-1/2" (29.2 cm) from back wall.
3. Drill 3/32" (2.4 mm) pilot holes into wood strip and install closet rod with screws provided.

### Note:

1. Closet rod must be secured to wood strip or stud.
2. Center rod support required. (not supplied)

### Installation:

1. Assembler la tringle en insérant la tringle de plus petit diamètre dans celle de plus grand diamètre.
2. Placer à environ 29,2 cm (11-1/2 po) du mur arrière.
3. Percer deux avant-trous de 2,4 mm (3/32 po) dans la bande de bois et installer la tringle avec les vis fournies.

### Note:

1. La tringle doit être bien fixée à une bande de bois ou un poteau.
2. Un soutien central est nécessaire. (non fourni)

### Instalación:

1. Ensamble la varilla deslizando la varilla de menor diámetro dentro de la varilla más grande.
2. Coloque la varilla para closet a 29.2 cm (11-1/2") de la pared posterior.
3. Taladre agujeros guía de 2.4 mm (3/32") en la tabla de madera e instale la varilla para closet con los tornillos suministrados.

### Nota:

1. La varilla para closet debe ser asegurada a la tabla de madera o travesaño.
2. Requiere soporte central para la varilla. (no suministrada)